

# Alberto


## Narrow 4 and 6 Drawer Chest Assembly




30-60 mins




## Parts

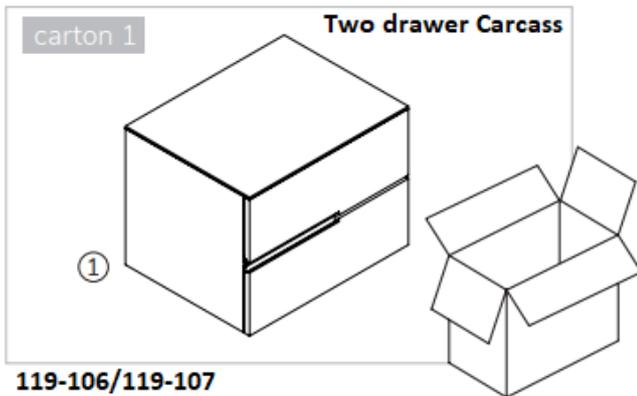


119-106/119-107  
x2 for Four drawer  
x3 for Six drawer

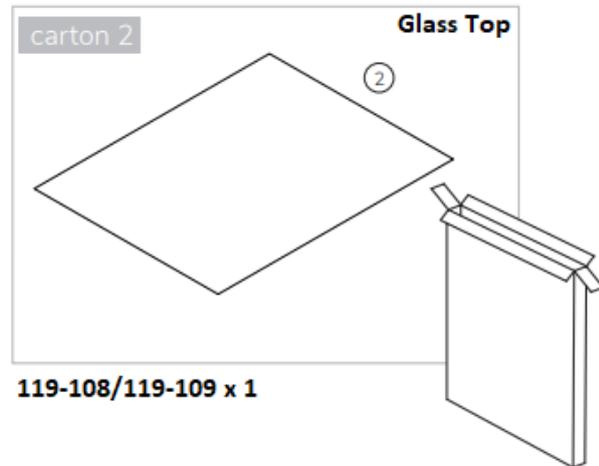


119-108/119-109 x 1

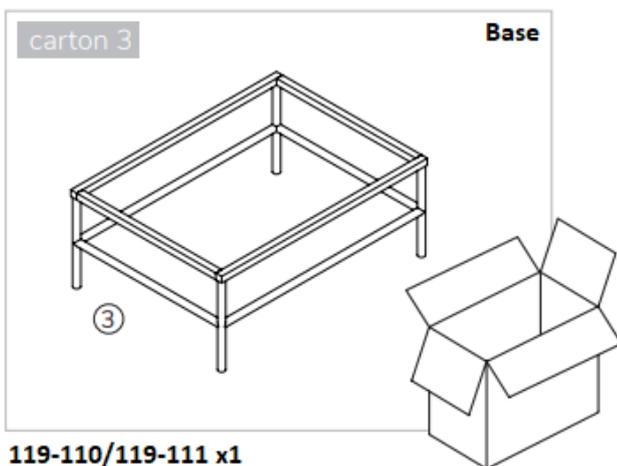

119-110/119-111 x1

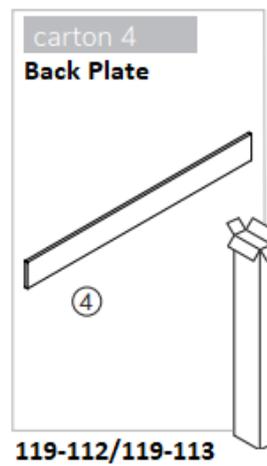


119-112/119-113  
x1

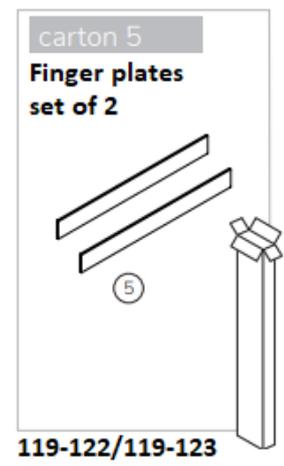

119-122/119-123  
x2 sets for Four Drawer  
x3 sets for Six Drawer


## Assembly stage 1 – Fixing the base

Attach the base (Carton 3) to the Two Drawer Carcass (Carton 1). Place the carcass on its back and fix using the bolts provided in the Base box. Once the base has been secured you will need to lift the bedside off its back and onto the base. **DO NOT PIVOT ON ONE BASE LEG.**

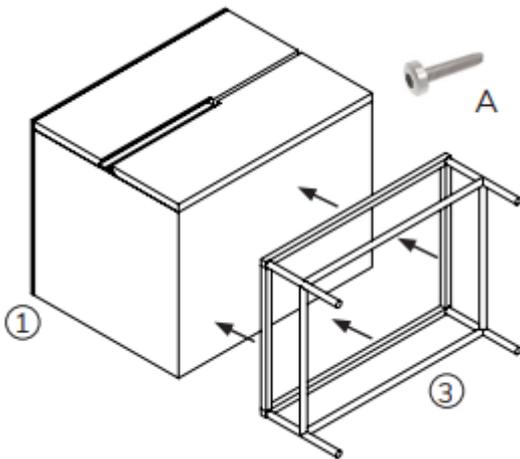

## Assembly Stage 2 – Stacking the carcasses


Once you have the bottom unit in place with the base fixed, you then need to place the rest of the two drawer carcasses on top. These are aligned up by metal bars (Included with the Two Door Carcass). These bars fit into the recessed grooves on the carcass. When you have the carcasses fully stacked, please securely fix these together with the square brackets included. These fix at the back and there are pilot holes for the screws.

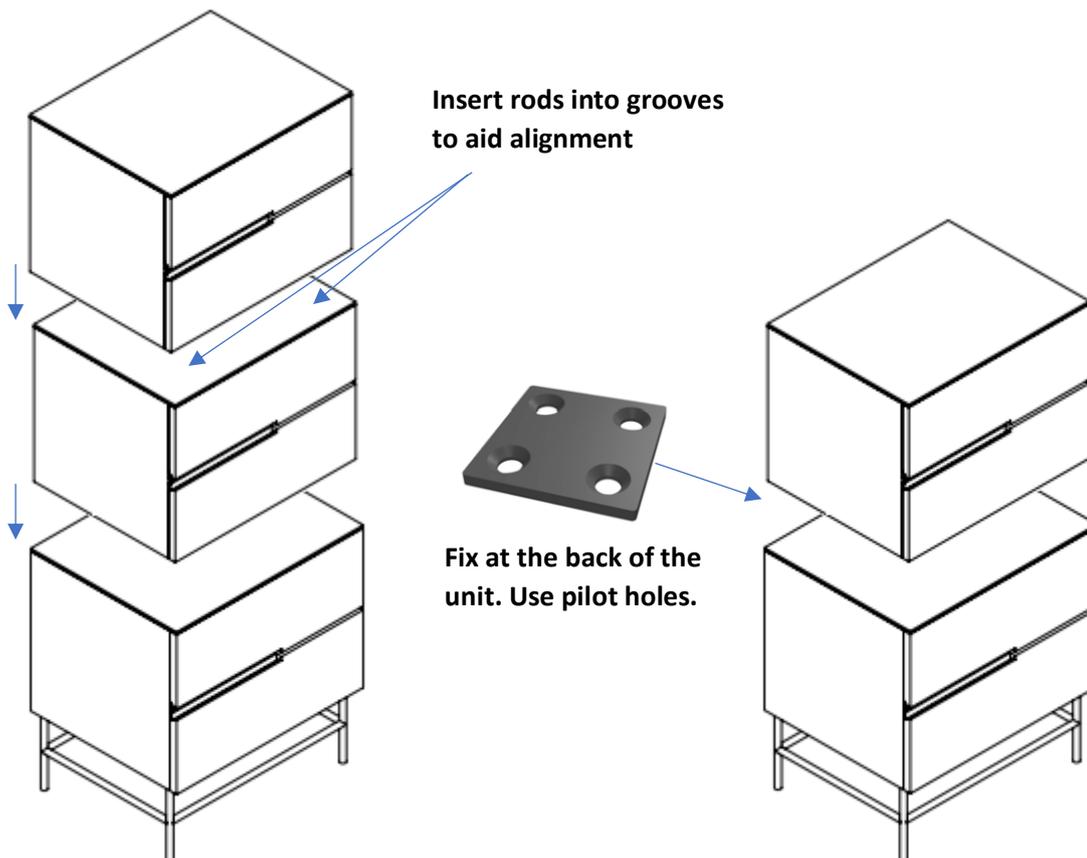

## Assembly Stage 3 – Flipping the drawer fronts


To get the desired look of the chest of drawers you will need to flip over the drawer fronts on one of your carcasses.

Achieve this by removing the stickers on the inside of the drawer and then undoing the large screws holding the fronts on using a screwdriver. Rotate the drawer front and replace.

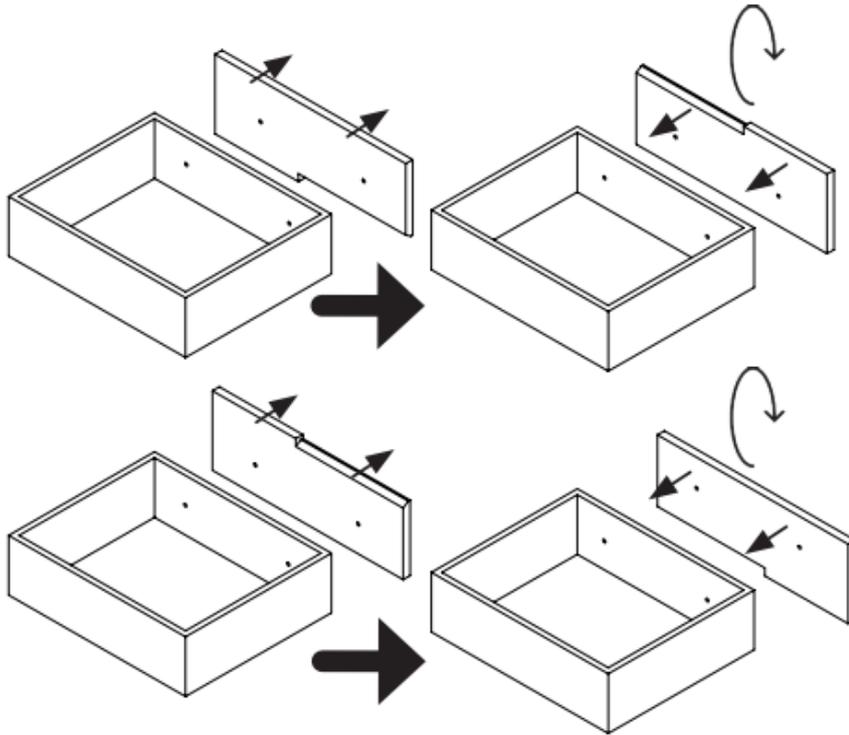


## Assembly Stage 4 – Fixing the fingerplates/back plate

1. To fix the finger plates you will require a screwdriver. Simply screw the fingerplates into the recessed grooves on the inside of the drawers.
2. To fix the back plate use the bolts provided in the carton and screw them into the threaded holes. Then drop the back plate over the bolts and tighten where needed.

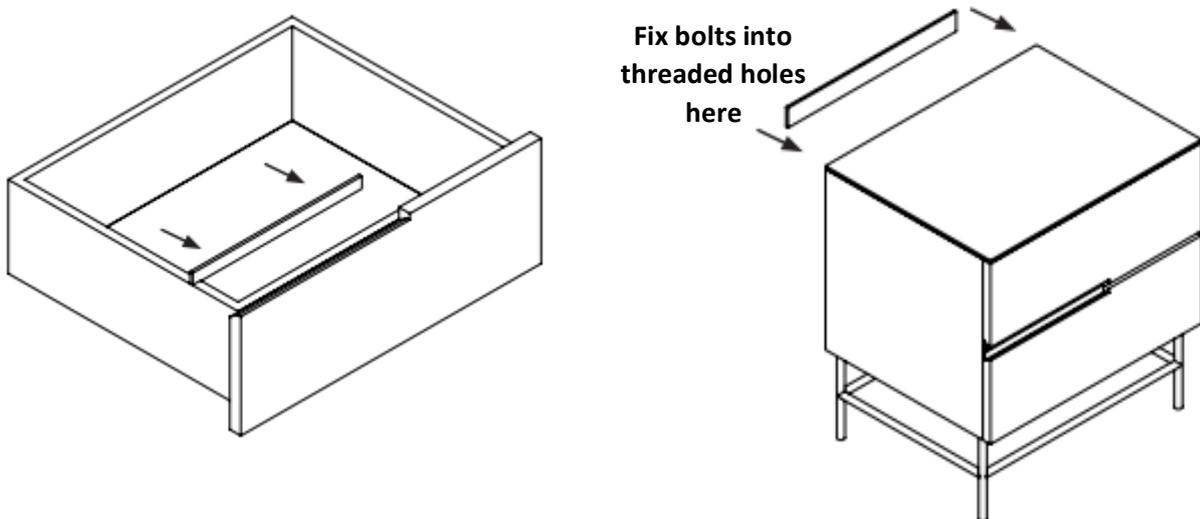

## Assembly Stage 5 – Placing the glass top

Place the double ended silicon suckers in various places on top of the top unit. One in each corner should be suffice (Suckers provided in glass top box). Then simply rest your glass top in place and lightly press down so the suckers stick to the glass.

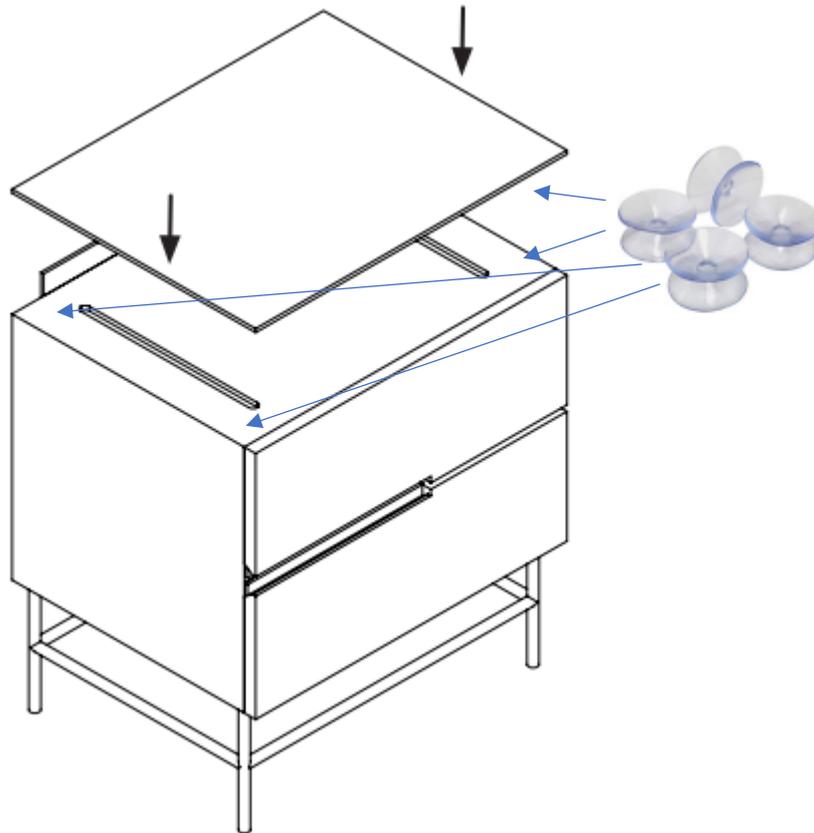




## Finished

Once the glass is in place your assembly is complete.




## wall fixing

It is strongly recommended that you use the fixing strap provided to secure the furniture item to the wall to avoid accidental tipping on uneven floors or from improper use.

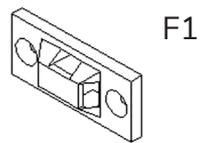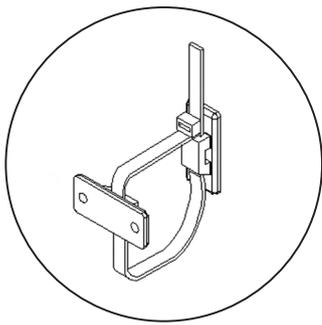


1.

- Attach 1 x bracket A to the top rear of the furniture frame

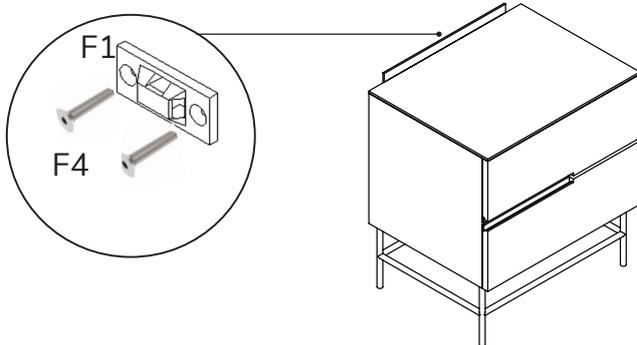

2.

- Make a mark on the wall approximately 2.5cm below bracket **F1** that is installed on the furniture.
- Attach the second bracket **F1** to the wall on this mark so it lines up vertically with the bracket on the furniture.
- To fix the bracket to the wall first drill 2 x 5mm holes into the wall at the mark using the bracket as a template for the hole position.
- Insert the plastic plugs **F3** into the holes in the wall and tap lightly with a hammer until they are seated flush.
- Attach the bracket A to the plastic plugs with long screws **F5**.

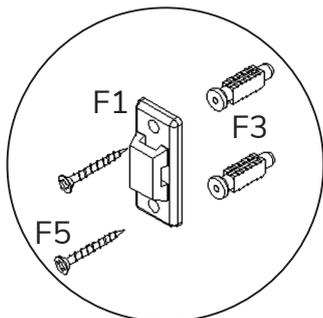

3.

- Move the furniture into position and line up the bracket F1 on the furniture with the bracket F1 on the wall.
- Thread strap F2 through the brackets as shown.
- Pull strap to secure but do not over-tighten

