


Federico



Desk

Model numbers 118-614/15/16/17/18/19

W1300 H740 D650



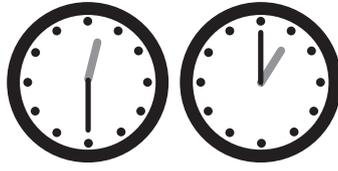


30-60 mins

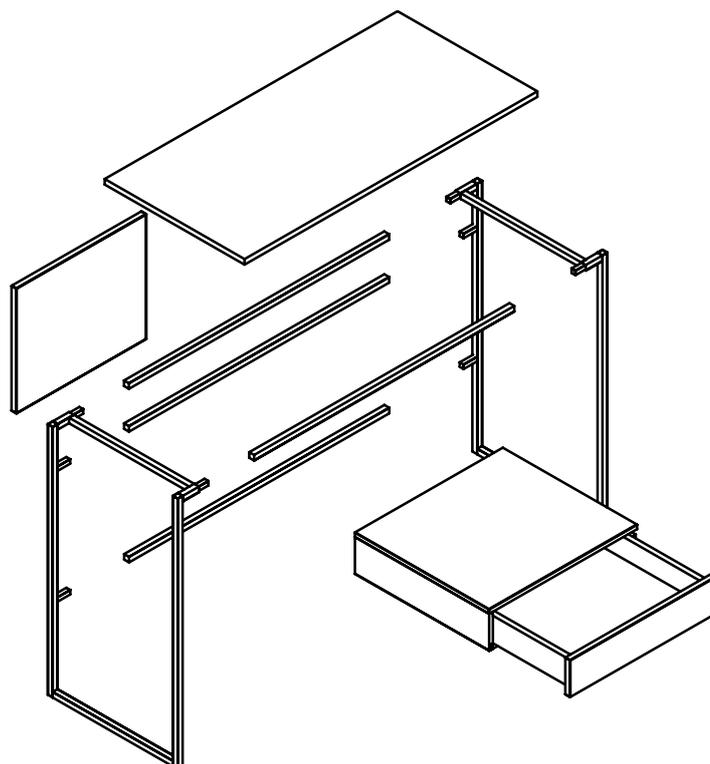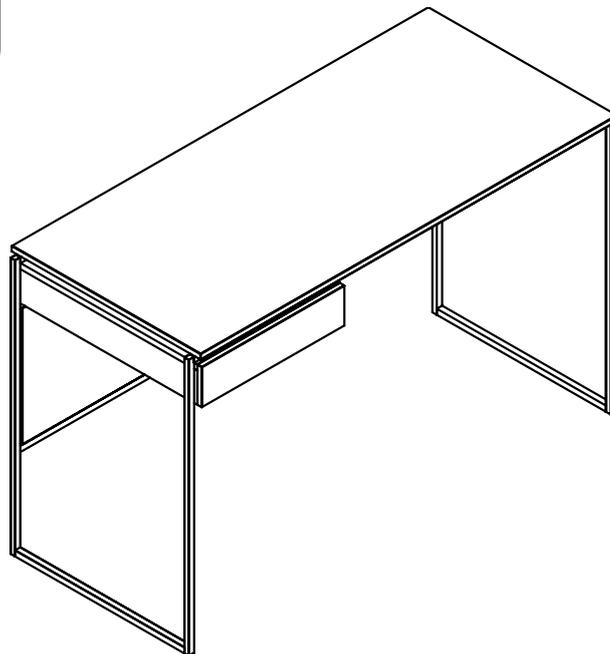

items

Total cartons = 3

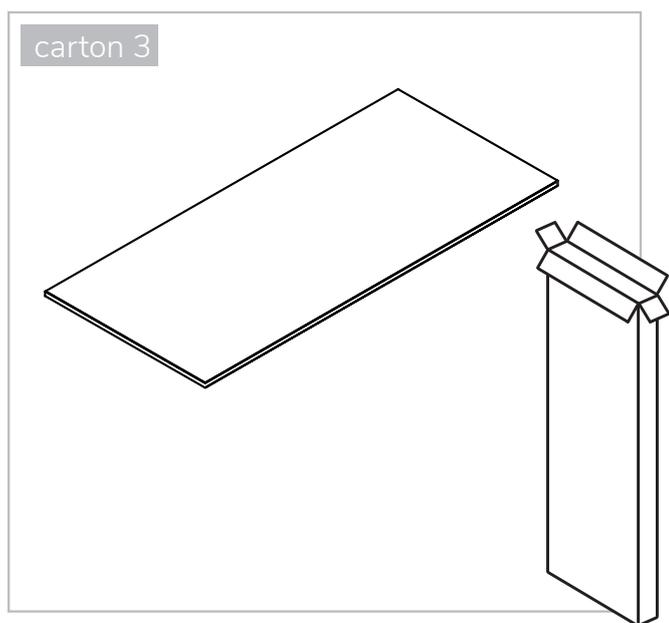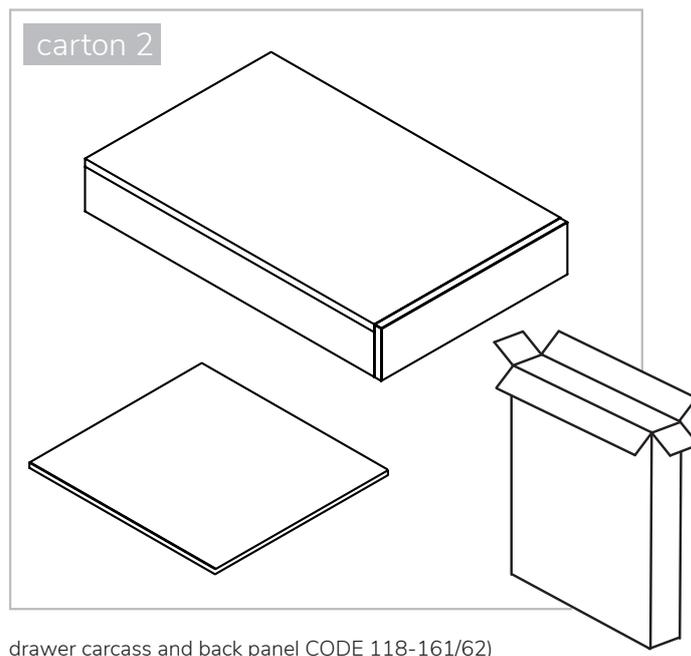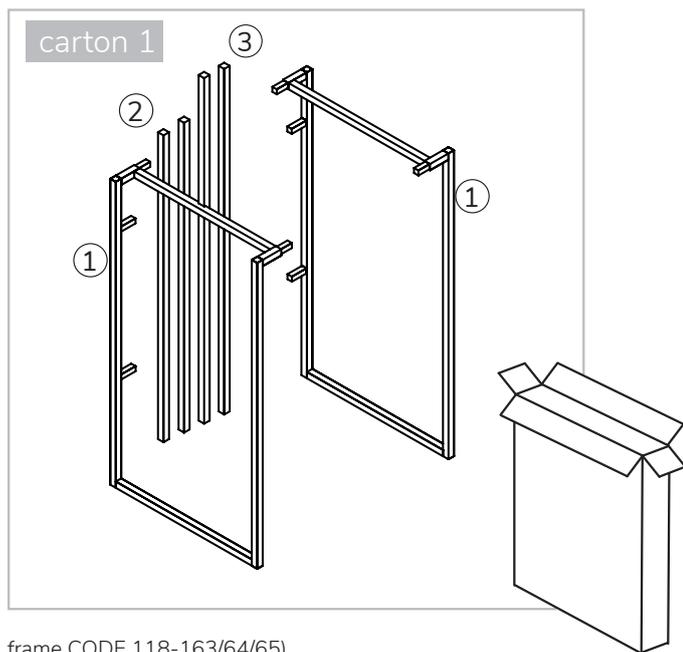


hardware

-  Item A = M6x20 x 6 (6 pieces in carton 2)
-  Item B = Self tapping screws x 4 (4 pieces in carton 2)
-  Item C = Allen key x 2 (1 in Carton 1)
-  Item D = Plastic Suckers x 8 (Carton 3)
-  Item E = M6*10 x 9 (Carton 1)


assembly stage 1

Important

Rails 2 and 3 - ensure that holes for the drawer and back panel fixing are all on the left during assembly.

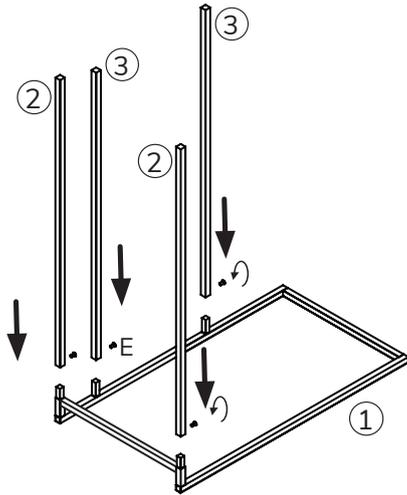

Place one side frame (1) on the floor and insert the rails as shown securing with the screws (E)

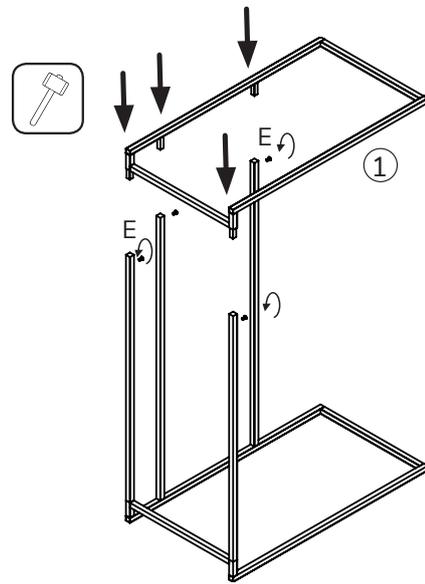


Place the second side frame in position and gently tap onto the rails ensuring the parts are tightly together before securing with the screws (E)

assembly stage 2




Self tapping screws x B

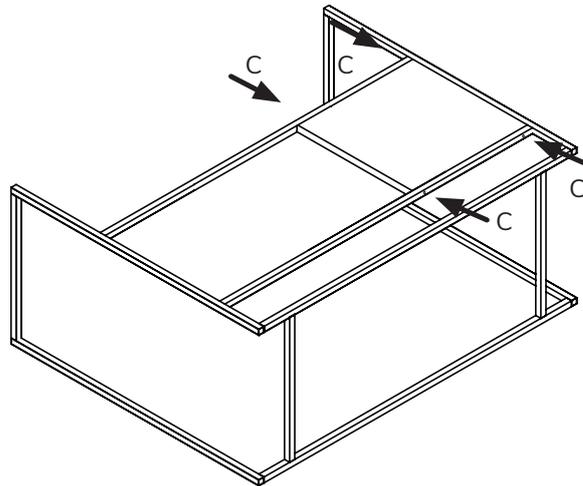


The small back panel is attached inside the frame using 4 screws (B)

assembly stage 3

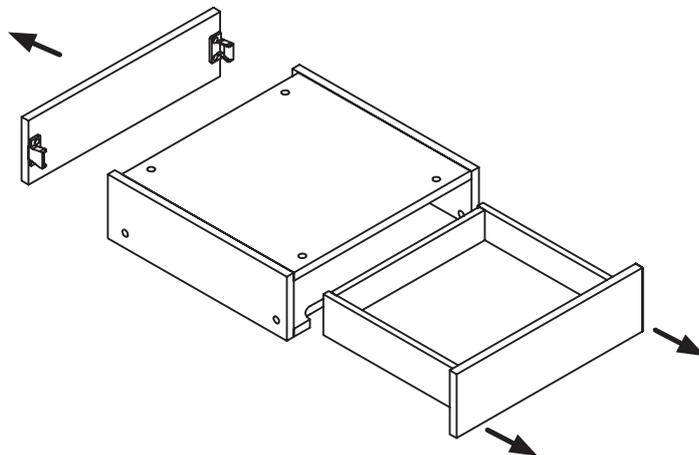


Release and remove the drawer by pressing (in opposite directions) the small plastic lever on each runner and then gently press the back panel from inside the carcass.

assembly stage 4

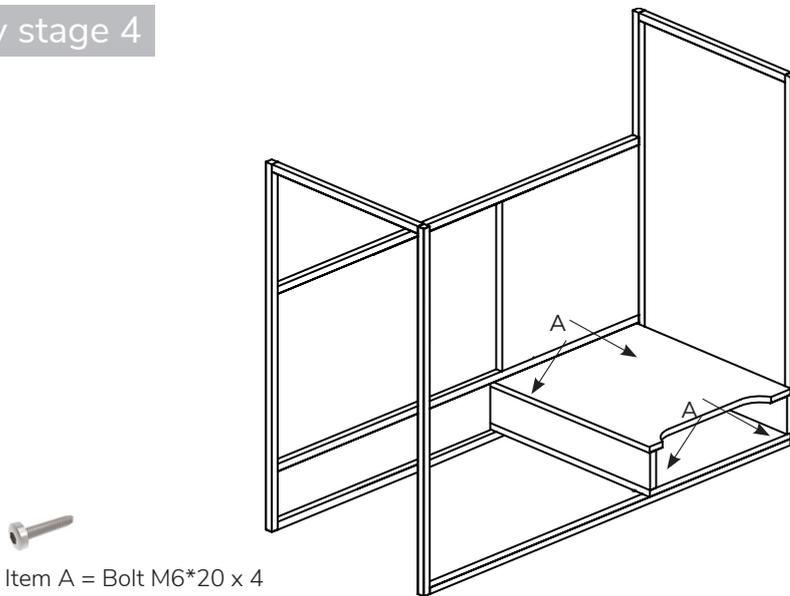

Attach the drawer carcass to the frame using 4 x screw (A). NB. Make sure the carcass is the correct way up (pre-drilled bolt holes facing the frame). Once fixed in place 'press the back panel into its original position and securely engage the drawer back onto its runners'

assembly stage 5

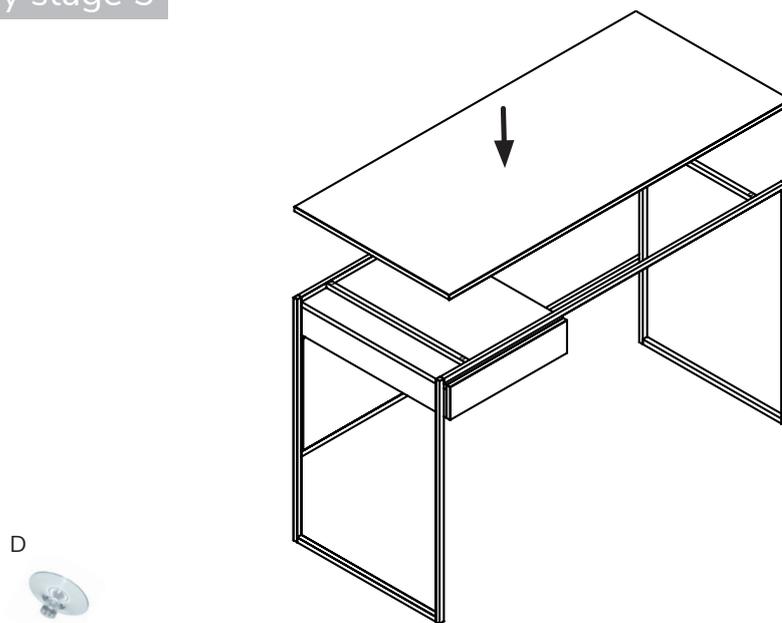

Place plastic suckers into frame holes and gently lower glass into place.



GILLMORE

BRITISH DESIGN

sales@gillmore.co.uk

www.gillmore.co.uk