


# Federico

## Sideboard





Model numbers 118-602/603/604/605/606/607

W1830 H740 D400

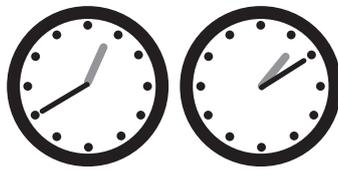


40-80 mins

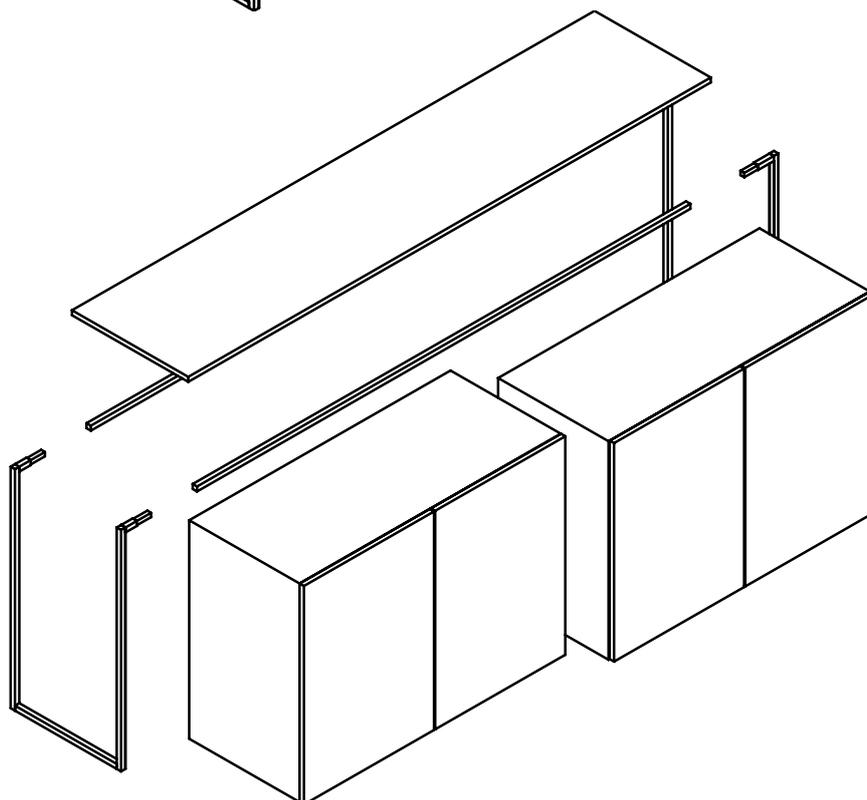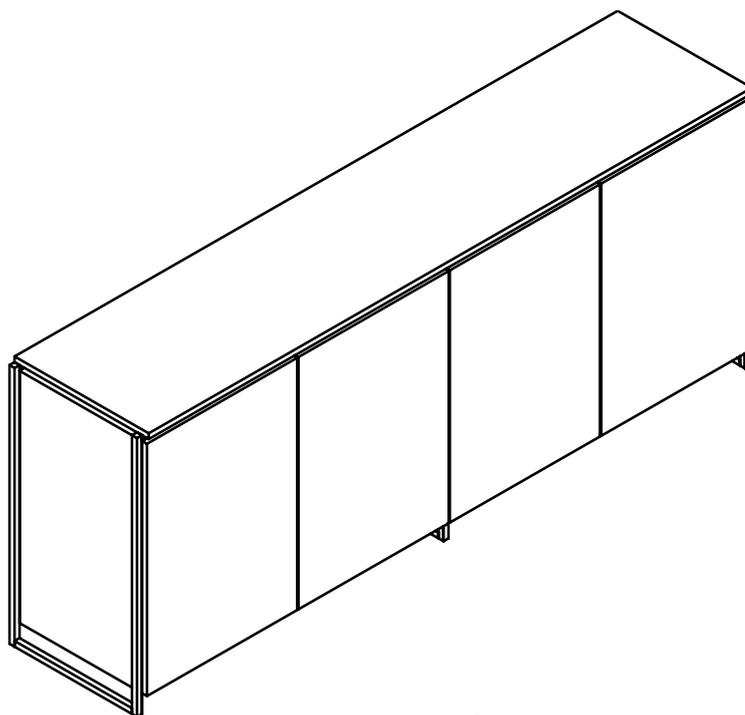


## items


total cartons = 6

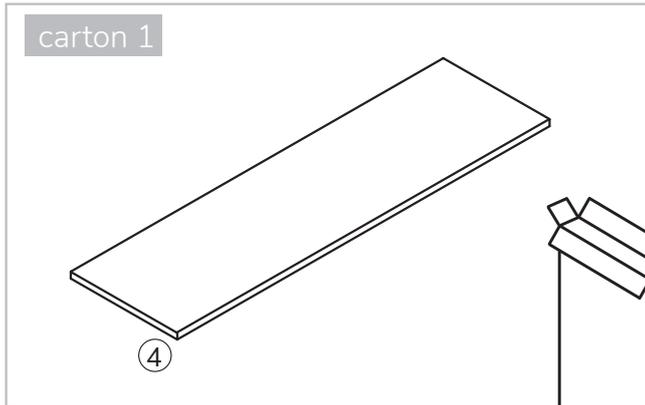


Top (190x47x7cm) - 118-150/151

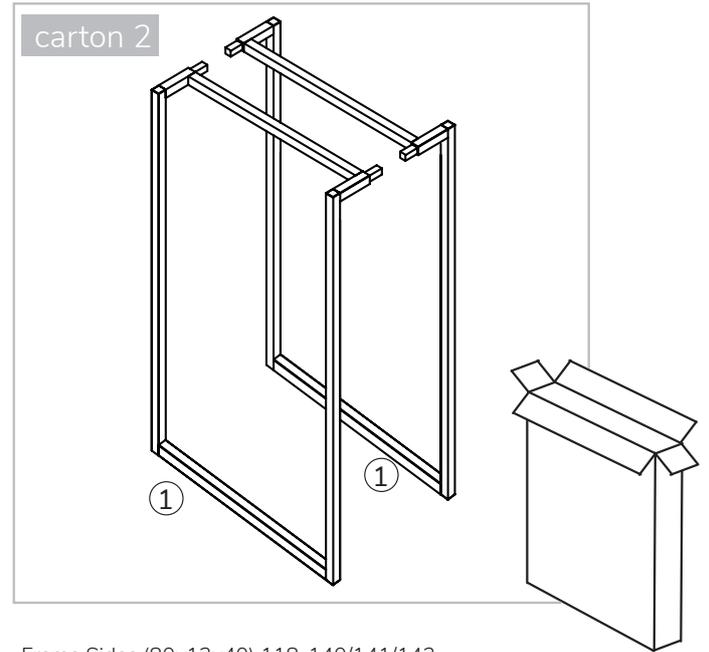


Frame Sides (80x13x40) 118-140/141/142

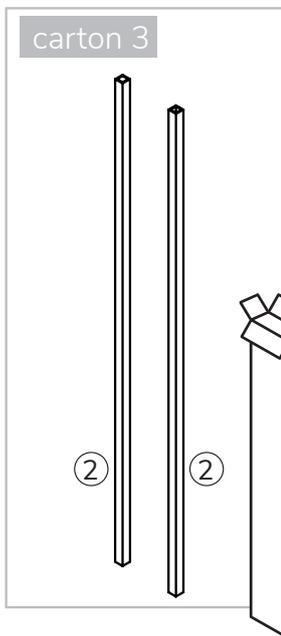

Part 1 - Horizontal Bars  
(166x08x04cm)118-152/153/154

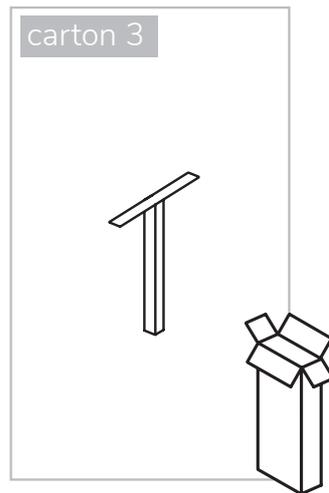

Part 2 - Central Foot ( 40x12x8cm)

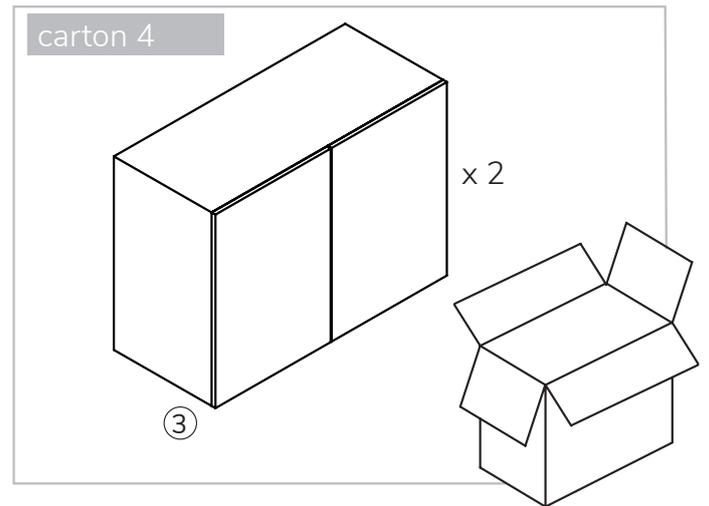

Carcass (95x45x65cm) - 118-146/147 x 2

## hardware



Item **A** = M6 \* 20 x 12 (in carton 4)



Item **B** = M6 \* 35 x 6 (in carton 1)



Item **C** = 4mm allen key x 1 (carton 4)




Item **D** = 6 x M6\*30 Insert + bolt (Carton 4)




Item **E** = Self tapping screws x 4 M4\*12 (Carton 3 -Part 2)

### assembly stage 1

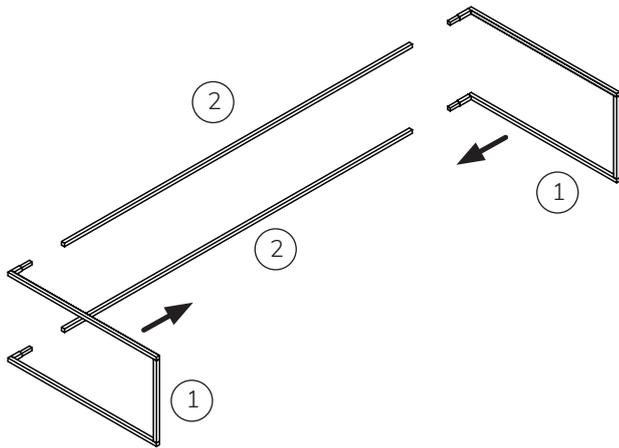


slide frame sides onto cross rails - no fixing required.

### assembly stage 2

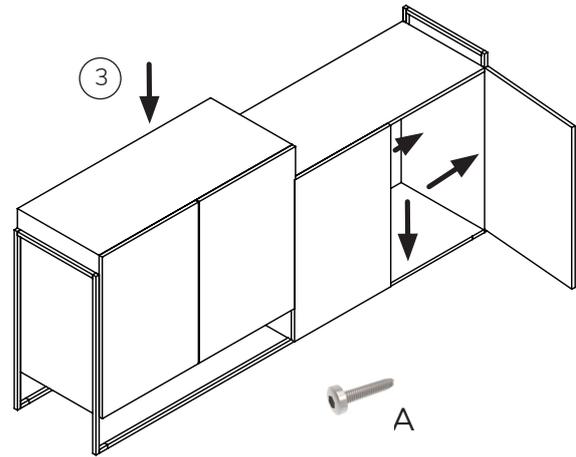


with the frame upside down, place the Carcasses (carton 4) into the frame side by side and fixed from the sides with Item A.

### assembly stage 3

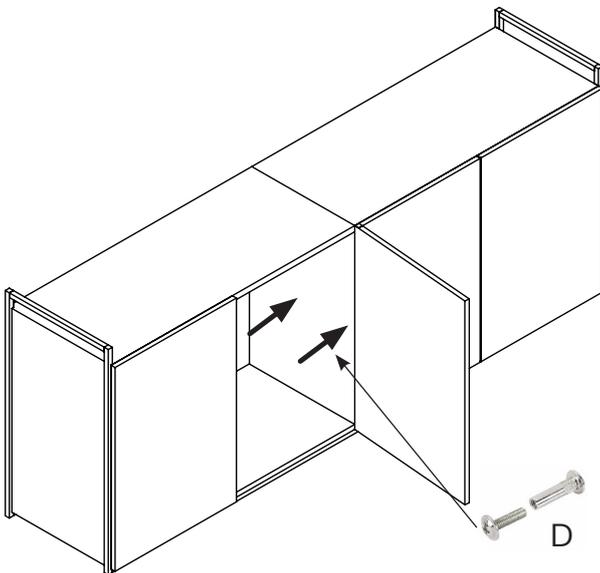


fix the 2 x carcasses together from inside with item D

### assembly stage 4

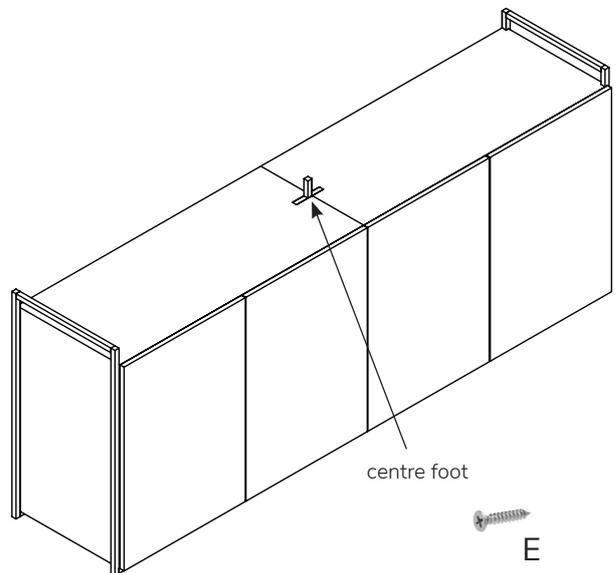


fix the centre foot to the underside of the carcasses with item E

### assembly stage 5

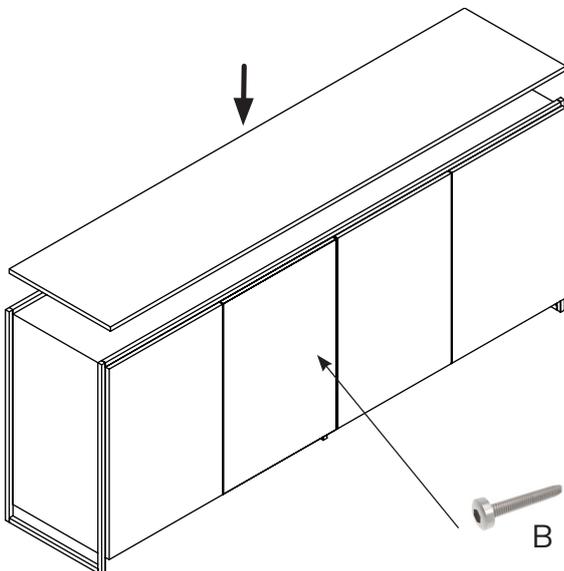


with the sideboard placed on its feet position the top and fix from inside with item B x 6

### assembly stage 6

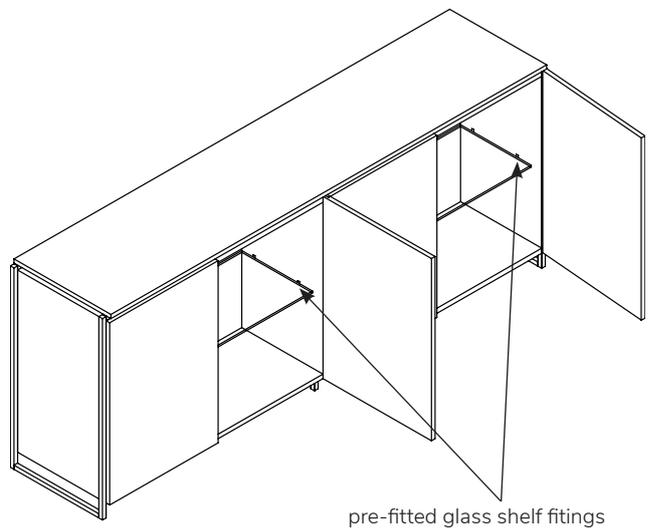

place and fix glass in place with supports pre-fitted to the carcass interior.

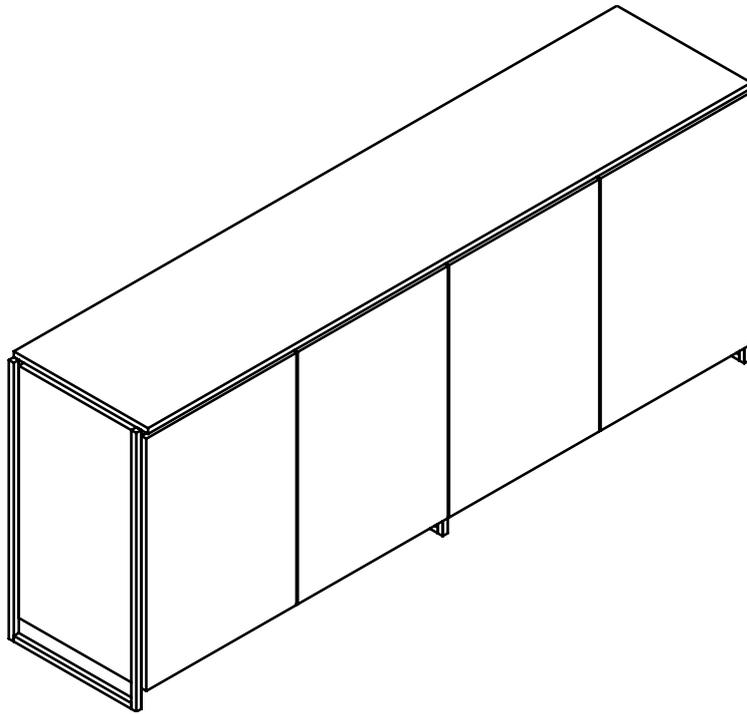

**GILLMORE**

BRITISH DESIGN

[sales@gillmore.co.uk](mailto:sales@gillmore.co.uk)

[www.gillmore.co.uk](http://www.gillmore.co.uk)