


Federico



Side Table

Model numbers 118-578/79/80/81/82/83

W430 H515 D400

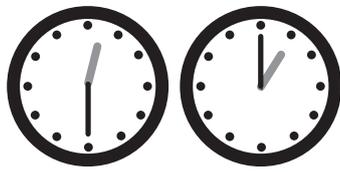


30-60 mins

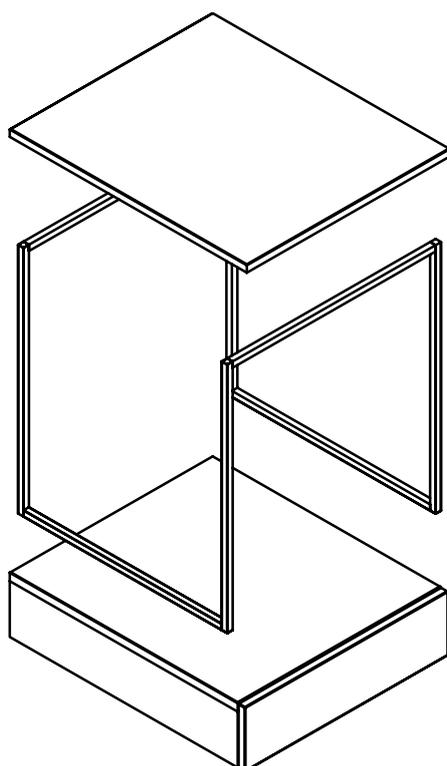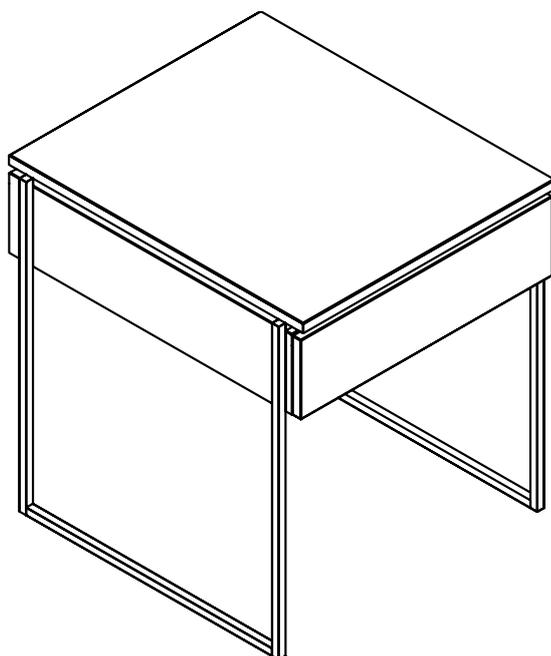


items

total cartons = 2

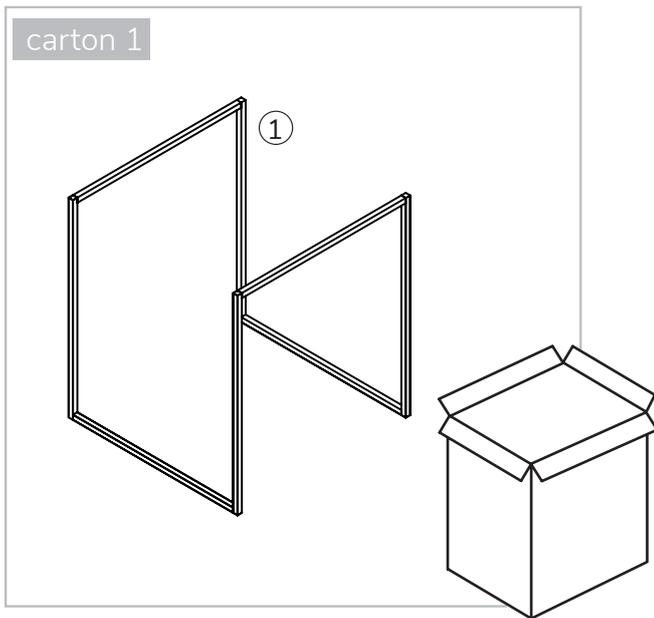

Carton 1 (cube shaped) = assembled frame
CODE 118-128/29/30

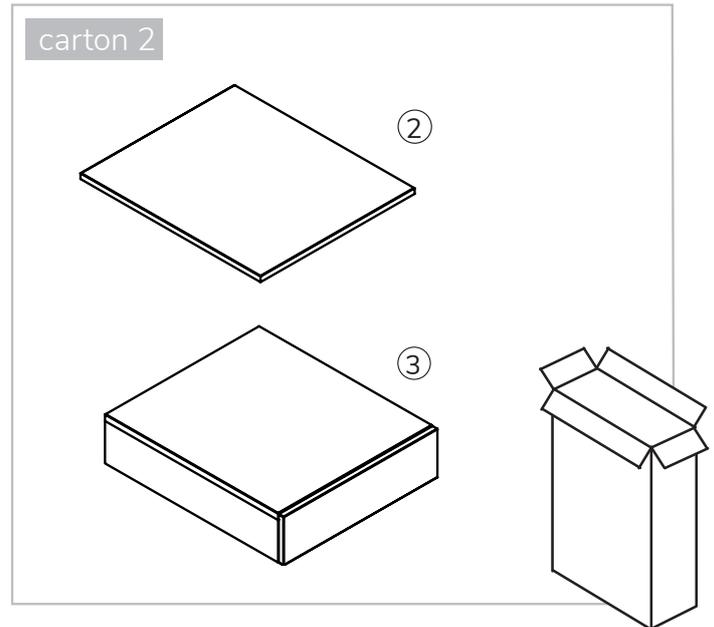

Carton 2 (flat square shaped) = drawer carcass and cabinet top
CODE 118-126/27


hardware

 Item A = M6*20 x 4 (4 pieces in carton 2)

 Item C = M6*35 x 4 (4 pieces in carton 2)


 Item B = 4mm allen key x 1

assembly stage 1

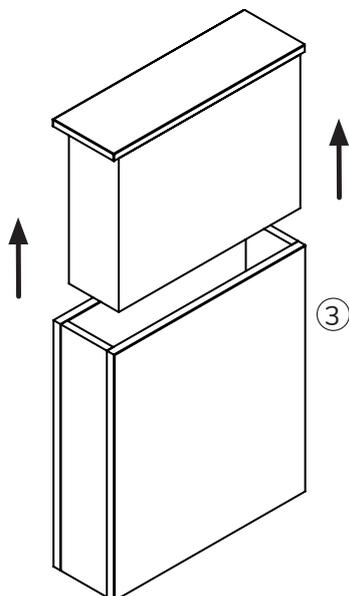


Remove drawer by pressing (in opposite directions) the small plastic lever on each runner.

assembly stage 2

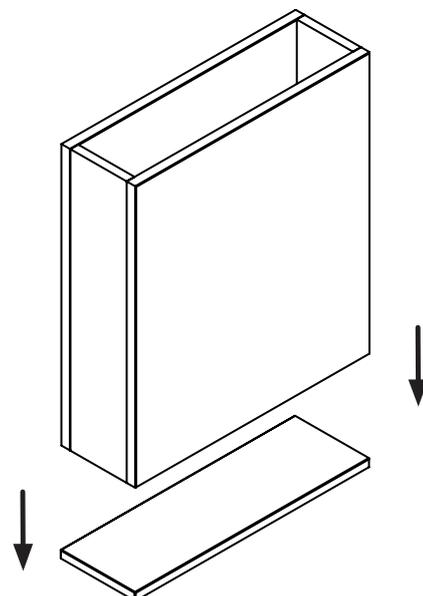

Gently press the back panel from inside the carcass to release.


assembly stage 3

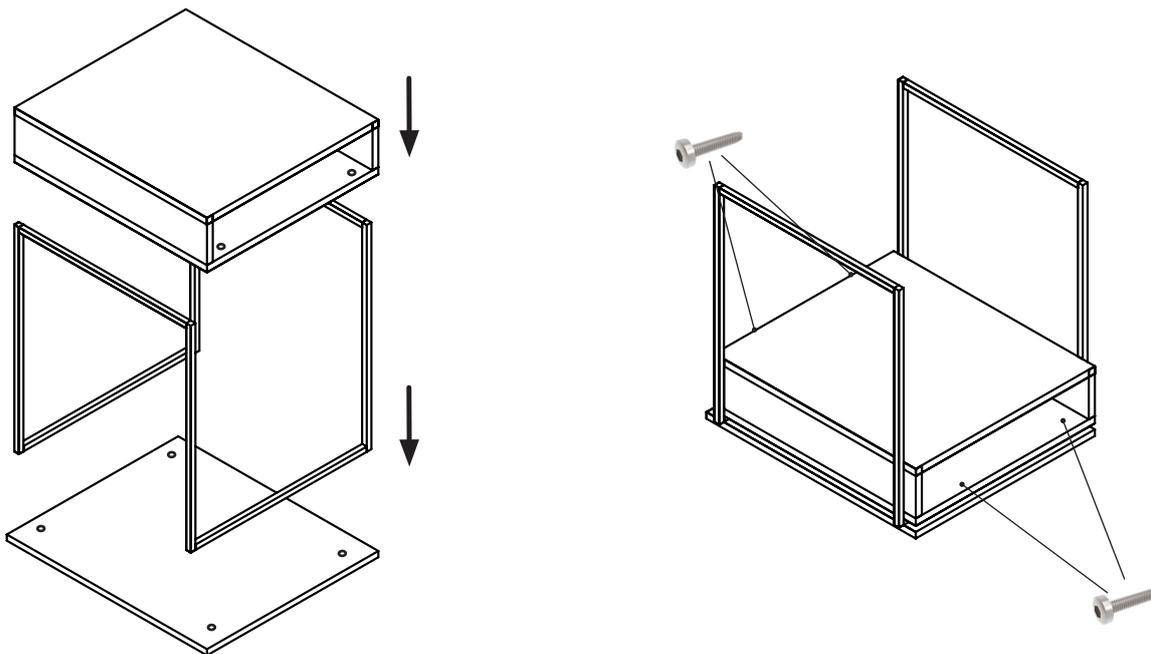

Position the frame upside down on the top and lower the carcass into place,

Secure the top and carcass to the frame using the bolts provided.

assembly stage 4

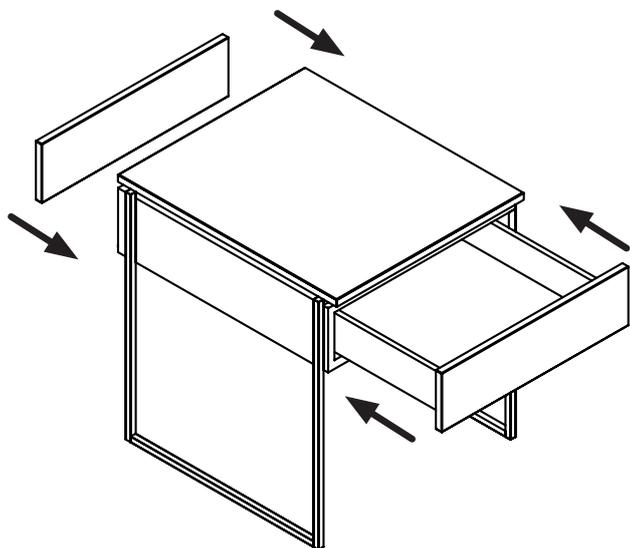

Press the back panel into its original position and securely engage the drawer back onto its runners



GILLMORE
BRITISH DESIGN

sales@gillmore.co.uk
www.gillmore.co.uk